

# Three record HD Dash cam




## 1. Appearance and key function description



- 1, M key 2, up key 3, down key 4, power key / OK key 5, in the car lens  
6, TF card slot 7, reset key 8, power type-c interface 9, AHD HD interface

## Touch function:

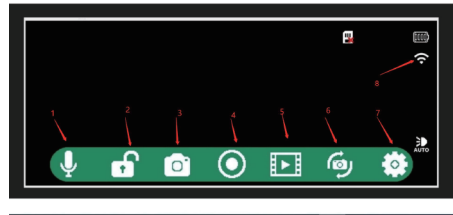

- 1, recording 2, video shackles 3, take photos 4, video or stop recording  
5, playback 6, switch "way ahead", "back" and "in the car" mode  
7, set the interface 8, WIFI icon

## 1. M / mode / emergency video lock / menu function

### Function 1: Mode function

In standby state, press [M] to switch between different modes (video / photo / playback).

### Function 2: Menu function

In standby state, press [M] to enter the main menu function setting table, press [Up] or [Down], select the options to be set, and press [OK] to confirm. After setting, press [M] until you exit the menu setting function. (The menu setting method is the same in video mode, photo mode and playback mode)

## 2. Turn up / camera switch

### Function 1: Upper page turning function

Upup in menu Settings and playback mode.

## Function 2: Emergency lock function

In video mode, if you want to protect the current video from being overwritten, long press [Up] to activate the emergency lock function. When the lock file icon appears on the upper left of the screen, the entire moment of the current time of the accident is saved as a special image, and the image will not be covered. Function 3: camera switch function

When the video is not recorded, press the top button to switch the picture, three screen, front full screen, full screen, internal full screen, rear full screen.

## Function 3: playback switch

Short press the key to select up and down, long press the key to switch ahead, internal, back folder

## 3. Power key / OK key

### Function 1: switch machine function

In the shutdown state, press [power button] for 2 seconds to turn on the power supply and the machine starts to work.

Press [power button] and keep it for 2 seconds to automatically save the video file and user setting and shut down.

### Function 2: Turn off the display screen function

At the power state point press [Power Key] The machine will turn off the display and again press on the display.

### Function 3: Start / close the video recording function

In video mode, press [Power] to start the recording, and press [Power] again to stop the recording.

## Function 4: File play key

In the file browsing mode, press [power button] briefly to play the video, and press [power button] briefly again to stop playing the video.

## Function 5: Confirm the key

In standby video mode / playback mode, press [power key] to enter menu mode, press [up / down] to browse and press [confirm] to determine.

## 4. Recording key / flip down / stop mode shortcut switch

### Function 1: Turn off the recording function

In video mode or standby mode, short press [Turn down key] to turn off the recording function. Then the microphone on the lower left side of the screen becomes a forbidden icon, indicating that the recording function has been turned off. Short press again to open the recording, and the icon shows the open recording.

### Function 2: lower page turning function

Lower pages in menu settings and playback mode.

### Function 3: Parking mode shortcut switch

Press the key in video mode or standby to turn on and close the parking mode.

## 5. Reset key

If the machine cannot switch the machine normally, press the reset key to restart the machine.



1. Scan the above QR code to download the "6 detective", and the installation steps are as follows. When the APP is downloaded and installed, all the prompts are allowed, and all the permissions of the mobile phone are opened.

2. APP mobile terminal connection and use.

1, open the mobile phone WIFI Settings, find RWY-ac57-XXXXXX, connect this WIFI name, the original password is 12345678, enter the mobile phone APP interface Settings can change the password, the name can not be changed, forget the personal setting password, restore the factory setting back to the initial password.

2. In the APP Settings, users can modify their personal Settings by themselves, and automatically change to the default value after resuming the factory.

Note: In the "Device video" function of the mobile APP, you can click on the needed video and download and save it to the mobile phone.